



2011-2015 Jeep Grand Cherokee WK2 Rear Shocks

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

Rear Parts List:

- 2 – 2.5 Rear Shocks (25001-336)
- 2 – Upper Mount Brackets (25035-102 – installed on shock)
- 2 – 16mm x 120mm Bolts (CB3831)
- 2 – 16mm Nylock Nuts (CN3003)
- 4 – 16mm Washers (CW1803)
- 2 – 1/2 x 2.75” Bolts (CB4730 – installed on shock)
- 2 – 1/2 Nylock Nuts (CN2801 – installed on shock)
- 4 – 1/2 Washers (CW1702 – installed on shock)

Tools Required:

- Floor Jack/Jack Stands
- Metric Socket/Wrench Set
- Standard Socket/Wrench Set


2011+ GRAND CHEROKEE WK2
OEM PERFORMANCE SERIES KITS



REAR: With the vehicle on level ground, block the front tires. Using a floor jack, raise the rear end and support the frame rails with jack stands for safety. Remove rear tires.

NOTE: Never work under an unsupported vehicle.

1. Remove factory shocks by first removing the lower mounting bolt using a 21mm socket on the head of the bolt and a 24mm wrench on the nut.

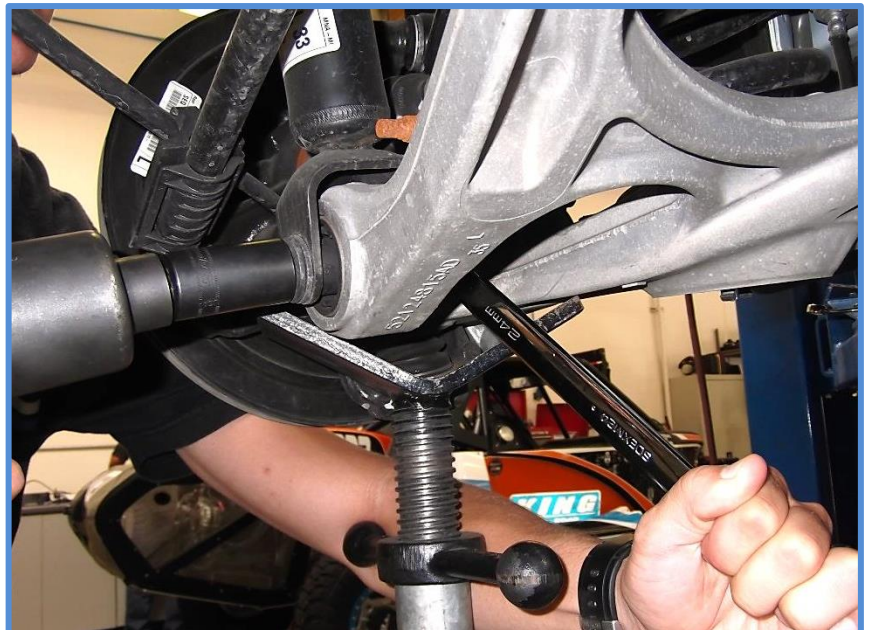

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2011-2015 Jeep Grand Cherokee WK2 Rear Shocks

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

2. Remove upper bolts using a 16mm socket on a long extension and remove shock from vehicle.



Remove the two lower push pins holding the fender liner to gain access to the upper mount when installing the King Shocks.



3. Install King Shocks by first installing the upper mounting brackets using the factory bolts. Remove upper mounting brackets (25035-102) from the shocks and install on vehicle first.



4. Place shock in position so that the reservoir is towards the rear of the vehicle and install the 1/2" x 2.75" bolts (CB4730) with washers (CW1702) and nuts (CN2801) in the upper mount first. **Torque bolts to 110 ft/lbs** using a 3/4 wrench/socket.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.


This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2011-2015 Jeep Grand Cherokee WK2 Rear Shocks

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

5. Install the provided 16mm bolts (CB3831) with washers (CW1803) and nuts (CN3003) in the lower mount and tighten with a 24mm Socket and wrench.

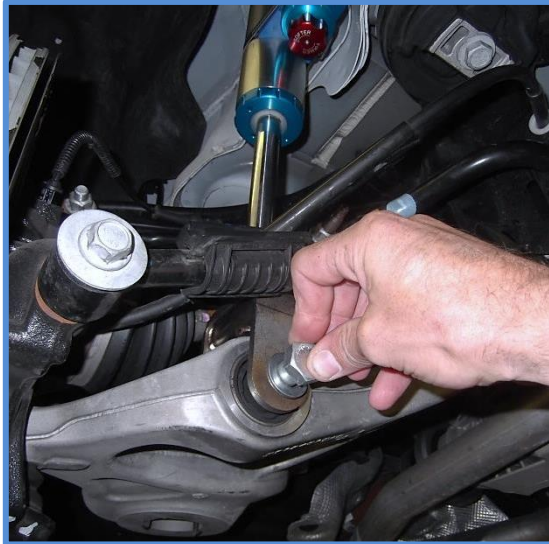

6. Replace the plastic push pins for the fender liner and you are done installing rear shocks!

LEFT



RIGHT



DOUBLE CHECK ALL HARDWARE:

Make sure everything is installed correctly and all hardware is tight before reinstalling tires. Install tires, remove jack stands and lower vehicle to the ground. Recheck all hardware and lug nuts after 100 miles and periodically after that as part of routine maintenance.

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.