



Polaris RZR XP Turbo S 2.5 IBP Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

Front Parts List:

2 – 2.5 IBP Front Coilovers (25700-327)

Tools Required:

Floor Jack/Jack Stands
Metric Wrench/Socket Set

Polaris RZR XP Turbo S
PERFORMANCE SERIES



INTERNAL BYPASS
IBP

FRONT: With the vehicle on level ground, block the rear tires. Using a floor jack, raise the front end and support the frame rails with jack stands for safety. **NOTE: Never work under an unsupported vehicle.**

1. First remove the lower mounting bolt using an 18mm wrench and socket.

2. Next unplug the wiring connector at the reservoir and unclip wire from shock. (If Applicable)



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



Polaris RZR XP Turbo S 2.5 IBP Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

3. Remove the upper mounting bolt using an 18mm wrench and socket.



4. Install King Shocks using the factory hardware. Be aware the shocks are side specific. Place the shock in position with the reservoir towards the rear of the vehicle and install the factory bolt in the upper mount first.



5. Install the factory bolt in the lower mount. Now tighten upper and lower bolts to factory specs.




IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



Polaris RZR XP Turbo S 2.5 IBP Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

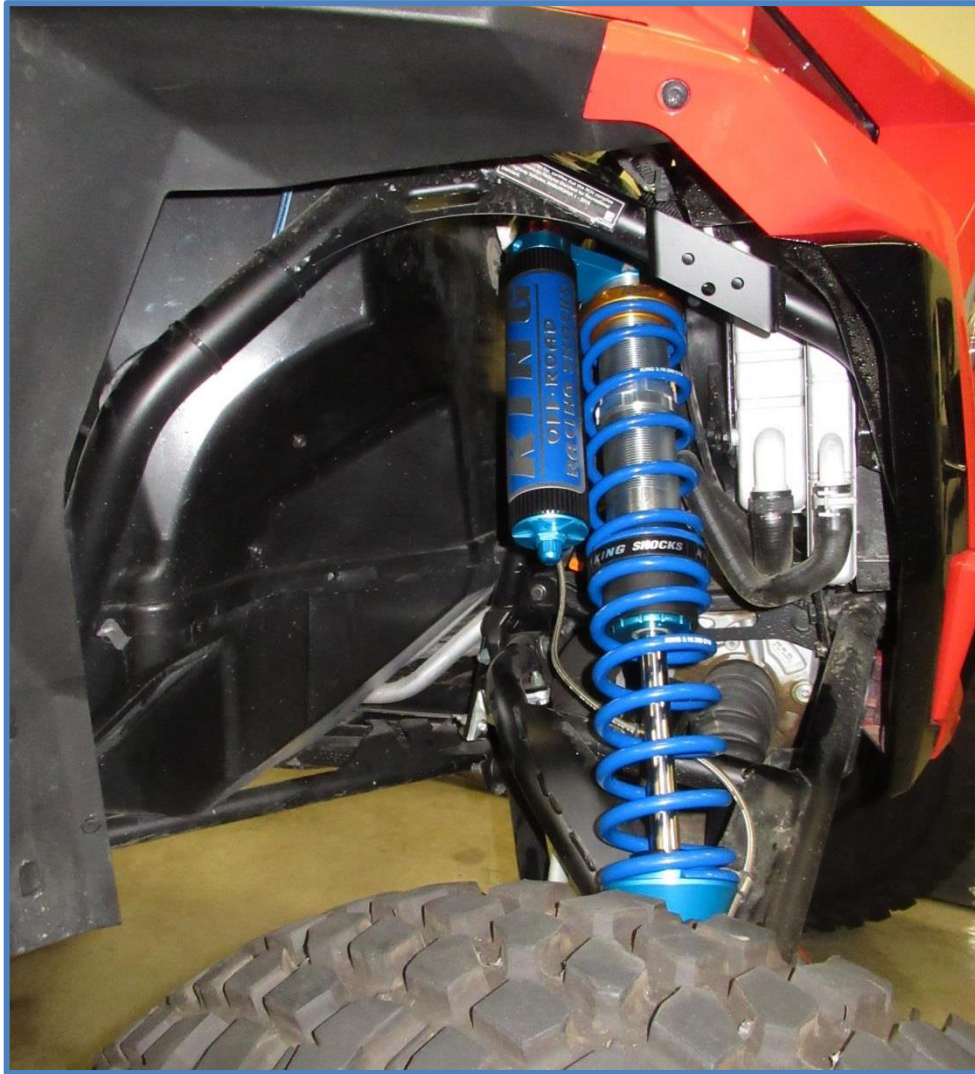

Double check your install, make sure the shocks are mounted properly and all hardware is tight. Recheck the hardware after 50 miles and periodically after that as part of routine maintenance.



King Shocks
12472 Edison Way
Garden Grove, CA 92841
www.kingshocks.com

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.