



2014+ Ram 2500 2.0 Steering Stabilizer

King Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

**Parts List:**

1 – 2.0 Steering Stabilizer (20C001-206)

**Tools Required:**

18mm Wrench or Socket

**RAM 2500 Steering Stabilizer**  
**DEM PERFORMANCE SERIES**



1. Remove factory steering stabilizer by removing the two mounting bolts using an 18mm wrench or socket.



**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.





## 2014+ Ram 2500 2.0 Steering Stabilizer

King Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

2. Install King Steering Stabilizer using the factory hardware. First place the cylinder end in the mount on the axle. Install the factory bolt through the mount from the bottom as shown then place the nut on top and tighten to factory specs.



**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.






### 2014+ Ram 2500 2.0 Steering Stabilizer

King Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

3. Place the shaft end in the mount on the tie rod. Install the factory bolt through the mount from the bottom as shown then place the nut on top and tighten to factory specs.

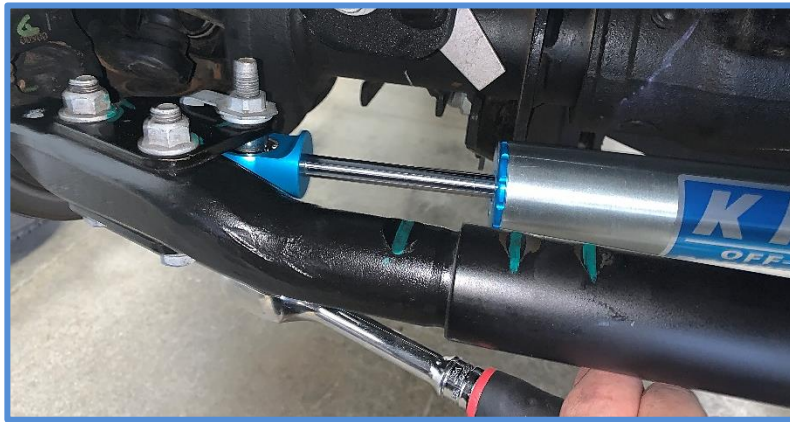

**DOUBLE CHECK ALL HARDWARE - Make sure stabilizer is installed correctly and all hardware is tight.**

**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.