



## 2016+ Can-am Defender 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

### Front Parts List:

2 – 2.5 Front Coilovers (25001-410A)

### Tools Required:

Floor Jack/Jack Stands  
Metric Wrench/Socket Set

**Can-am Defender**  
UTV PERFORMANCE SERIES



**FRONT:** With the vehicle on level ground, block the rear tires. Using a floor jack, raise the front end and support the frame rails with jack stands for safety. **NOTE: Never work under an unsupported vehicle.**

1. Remove lower mounting bolts using a 15mm wrench/socket.

2. Remove upper mounting bolts using a 15mm wrench/socket and remove shocks from vehicle.



**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.




2016+ Can-am Defender 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

3. Install King Shocks – Place the top of shock in the upper mount and install the factory bolt and nut. Place the rod end in the lower mount and install the factory bolt and nut. Tighten all bolts to factory specs.

LEFT

RIGHT

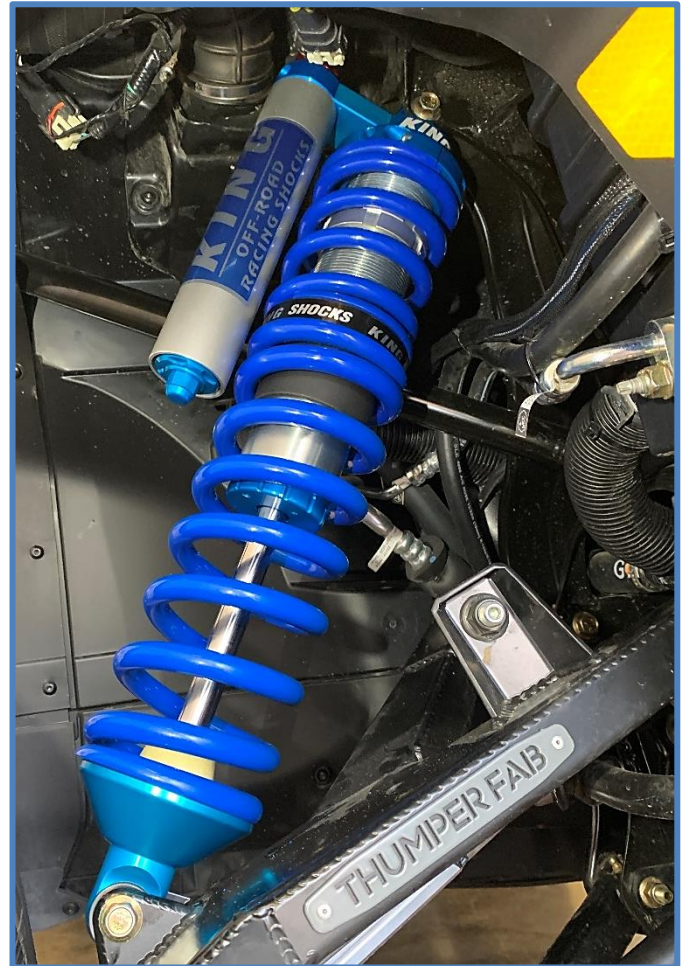

**Double check your install, make sure the shocks are mounted properly and all hardware is tight. Recheck the hardware after 50 miles and periodically after that as part of routine maintenance.**



**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.