



Polaris RZR Pro R Rear Sway Bar Shocks

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

Rear Parts List:

2 – 2.0 Sway Bar Shocks (20C001-403)

Tools Required:

18mm Wrench/Socket

Polaris RZR PRO R
UTV PERFORMANCE SERIES



1. Remove stock or existing sway bar link by removing the upper and lower mounting nuts/bolts on both sides of the vehicle using an 18mm wrench and socket. Save the hardware, you will reuse the factory hardware for mounting Sway Bar Shocks.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.



This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



Polaris RZR Pro R Rear Sway Bar Shocks

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

2. Place the Sway Bar Shock on the upper mounting stud and place the rod end in the lower mount. Reuse factory hardware and tighten to factory specs.

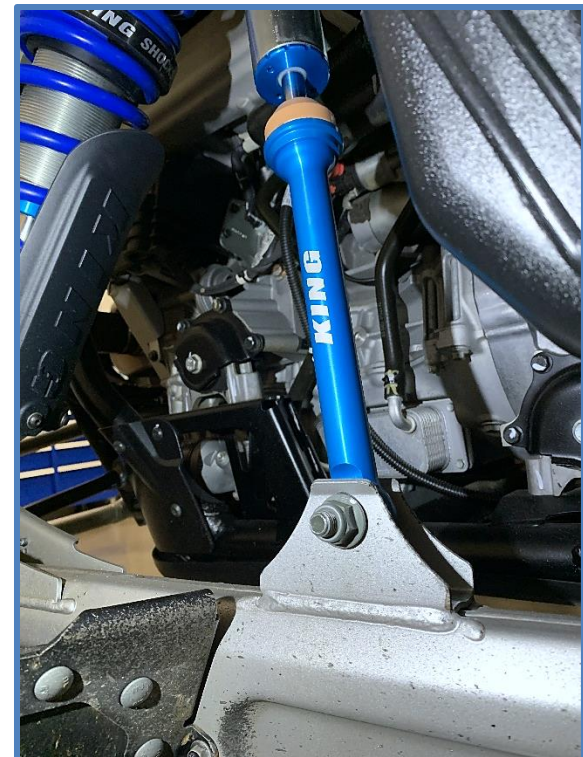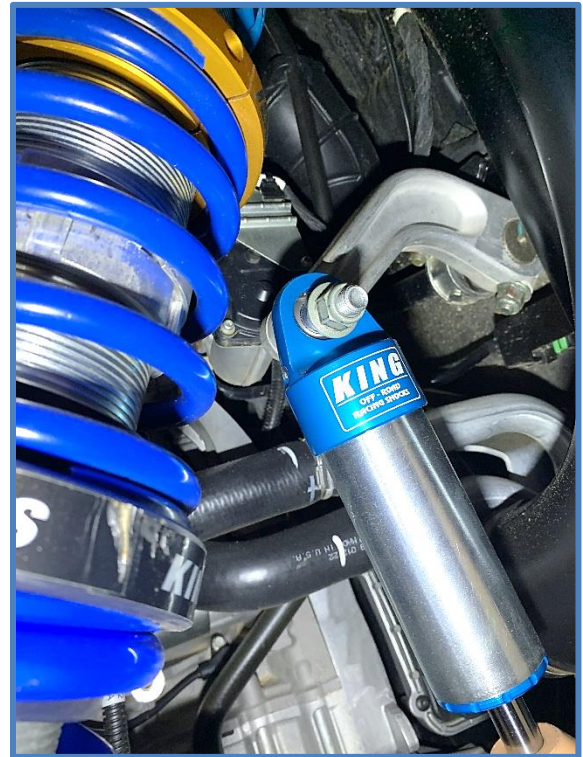

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



Polaris RZR Pro R Rear Sway Bar Shocks

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com



Double check your installation, make sure the shocks are mounted properly and all hardware is tight. Recheck the hardware after 50 miles and periodically after that as part of routine maintenance.

RZR Pro R with AFTERMARKET sway bar or AFTERMARKET trailing arm may require modifications to spacers to accommodate a larger bolt or different mounting widths.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701
Most important after the install, Feel the difference and have fun.