



## 2019+ Honda Talon 1000X 2.5 IPB and 1000R 3.0 IPB Rear Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

### Rear Parts List:

2 – 1000X 2.5 IPB Rear Coilovers (25700-111A) **OR**

2 – 1000R 3.0 IPB Rear Coilovers (33700-399A)

### Tools Required:

Floor Jack/Jack Stands  
Metric Wrench/Socket Set

### Honda Talon UTV PERFORMANCE SERIES



MADE IN **100%**  
MADE IN THE USA  
FROM THE HIGHEST  
QUALITY BILLET  
ALLOY MATERIALS.  
U. S. A.

Photos show 1000X Model.

1000R installation is similar but the shocks  
are different. Shocks are not interchangeable  
between 1000X and 1000R Models.

**REAR:** With the vehicle on level ground, block the front tires. Using a floor jack, raise the rear end and support the frame rails with jack stands for safety. **NOTE: Never work under an unsupported vehicle.**

1. Remove the existing shocks by first removing the lower mounting bolt using a 17mm wrench/socket. Then remove the upper mounting bolt using a 17mm wrench/socket and remove shocks from vehicle.



**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.


This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701  
Most important after the install, Feel the difference and have fun.

2019+ Honda Talon 1000X 2.5 IBP and 1000R 3.0 IBP  
Rear CoiloverKing Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

2. Install King Shocks – Shocks are side specific, see photos below for proper orientation. Place the shock in the upper mount with the reservoir facing out towards tire and back towards rear of vehicle, install the factory hardware and tighten to factory specs.



3. Place the rod end in the lower mount with the shaft guard facing forward, install the factory hardware and tighten to factory specs.

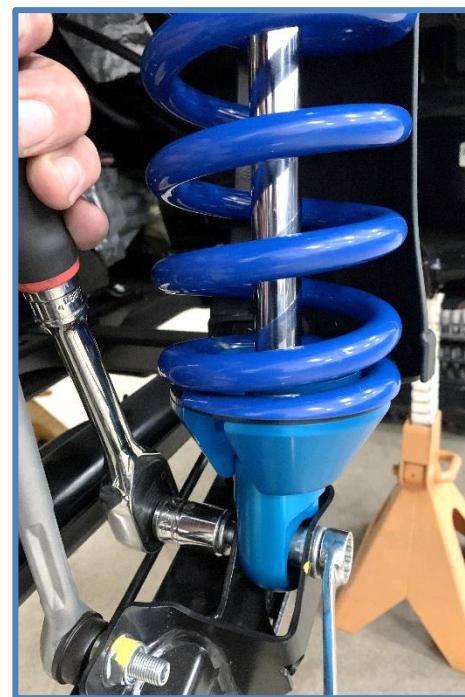

**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701  
Most important after the install, Feel the difference and have fun.

2019+ Honda Talon 1000X 2.5 IBP and 1000R 3.0 IBP  
Rear CoiloverKing Shocks 12472 Edison Way Garden Grove, CA 92841  
714-530-8701 [www.kingshocks.com](http://www.kingshocks.com)

## Honda Talon 1000X Rear



**Double check your install, make sure the shocks are mounted properly and all hardware is tight. Recheck the hardware after 50 miles and periodically after that as part of routine maintenance.**



**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701  
Most important after the install, Feel the difference and have fun.